

au by KDDI

EXILIM ケータイ CA006

Basic Manual

READ THIS MANUAL TO MASTER
THE CELLULAR PHONE

www.au.kddi.com

Illustrations and
Screenshots
in This Manual

Notes on
Cell Phone Use

Contents

Getting Ready

Making and
Answering Calls

Global Function

Character Input

Address Book

Mail

Camera

EZweb

EZ News EX

EZ Navi

TV (1Seg)

Teens Mode

In Case of Loss
of Your CA006

Troubleshooting

Index

Introduction

Thank you for purchasing the CA006. Before using your CA006, be sure to read the CA006 Basic Manual (this PDF manual) to ensure correct usage. After you have finished reading this manual, store this PDF manual and the printed manuals in safe places so you can retrieve them whenever you need them.

- All mentions of "the CA006" in this manual refer to "the EXILIMケータイ CA006."

Manuals for the CA006

There are three manuals for the CA006: the Basic Manual, printed Instruction Manual (Japanese) and full Instruction Manual (Japanese).

● For learning the basics:

Read the CA006 Basic Manual (this manual) or printed CA006 Instruction Manual (Japanese).

● For learning details of each function:

The full Instruction Manual (Japanese) gives detailed instructions on using each function and can be downloaded from the au homepage: <http://www.au.kddi.com/torisetsu/index.html>

To ensure proper usage of the CA006, be sure to read the Safety Precautions “安全上のご注意” in the Instruction Manual.

The keyword searchable au Online Manual is also available on the au homepage:

<http://www.au.kddi.com/manual/index.html>

- To access from EZweb (free of packet communication charge):

 ⇒ Top Menu/Search ⇒ auお客様サポート (au Customer Support) ⇒ オンラインマニュアル (Online Manual)


Scan this QR code to access the au Online Manual. ▶



Illustrations and Screenshots in This Manual

Note on Illustrations

The illustrations in this manual may look different from the actual cell phone in shape, color and typeface. The key illustrations are also simplified as shown below.

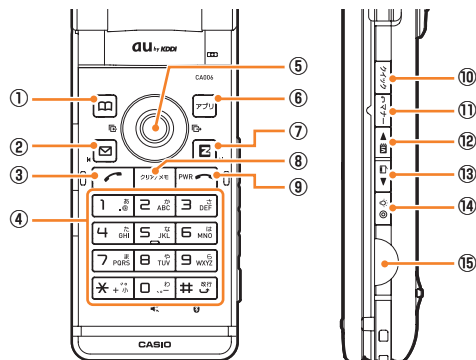

	Key Illustration		Key Illustration
①		⑦	
②		⑧	クリアメモ
③		⑨	PWR
④	1	⑩	クイック
	2	⑪	マナー
	3	⑫	
	4	⑬	
	5		
	6		
	7		
	8		
	9		
	* (OFF)		
	0		
	#		
⑤		⑭	
⑥	アプリ	⑮	

Note on Screenshots

The screenshots in this manual are simplified and may look different from the actual cell phone screens.

- The display design themes of the CA006 vary by model color. The screenshots for the Bitter Black models are used in this manual.

Notes on Cell Phone Use

Cell Phone Etiquette

The cell phone always emits weak radio waves when power is on.

Use the cell phone in an enjoyable and safe manner without forgetting to be considerate of others around you.

- **Use of cell phones is not allowed in some places.**
 - Cell phone use while driving a car or motorcycle is dangerous, and is thus prohibited by law. You may also be prosecuted for use while riding a bicycle.
 - Using a cell phone in an aircraft is prohibited by law. Set Airplane Mode to *ON* and turn the cell phone power off.
- **Radio waves from cell phones may interfere with medical electrical equipment.**
 - Some people close to you in crowded places such as packed trains may be using a cardiac pacemaker. Turn the cell phone off in such places.
 - Abide by the rules of hospitals and other medical institutions where it is forbidden to use or carry cell phones.
- **Be considerate of where you use the cell phone and how loudly you talk.**
 - Do not make calls in theaters, museums, libraries, and other similar places. Turn power off or turn on manner mode not to disturb others around you by ring tones.
 - Do not use the cell phone on a street where you might interrupt the flow of pedestrians.

- Move to areas where you will not inconvenience others on trains or in hotel lobbies.
- Refrain from talking in a loud voice.
- Obtain the permission of other people before you take their photos with the cell phone's camera.
- Do not record information with the cell phone's camera in bookstores and other locations where taking photos is not permitted.

Do Not Use the Cell Phone While Driving!

Turn off your cell phone or put it in Drive Mode while driving.

 


Do not use the cell phone while driving a car/motorcycle or riding a bicycle. It may result in a traffic accident. Using a cell phone while driving is prohibited by law. Using a cell phone while riding a bicycle may also be punishable by law.

Prohibited!

- Looking at a cell phone display
- Talking on a cell phone while holding it

Drive Mode

In Drive Mode, a Japanese message meaning "I'm driving now, so I can't answer your call." is played when a call is received, and asks the caller to leave a message on the answer memo.

When the standby screen is displayed, press , use  to select *Drive*, and then press  (Set).

Disaster Message Board Service

When a large scale disaster occurs, you can register your safety information from EZweb. The registered information can be referred from anywhere in Japan from EZweb or Internet.


Registering safety information

- When a large scale disaster occurs, from an au phone, you can register your safety information (i.e. your condition and comments) to the 災害用伝言板 (Disaster Message Board) created on the EZweb.
- After registration of your safety information, e-mail is sent to your family or acquaintances you have previously designated to notify that your safety information has been uploaded to the 災害用伝言板 (Disaster Message Board).

Inquiring for safety information

- You can inquire for safety information of a person by entering his/her phone number from EZweb or Internet.*
* To inquire from other carriers' cell phone, a PHS or PC, access "<http://dengon.ezweb.ne.jp/>".

Access	 ⇒ Top Menu/Search ⇒ 災害用伝言板 (Disaster Message Board)
	http://dengon.ezweb.ne.jp/

- Registered information is stored until the service set up for the disaster ends.
- The maximum available number of registrations is 10 per phone number. When the number of registrations exceeds 10, the oldest one is overwritten.
- The demonstration of this service can be referred to anytime by pressing  ⇒ Top Menu/Search ⇒ auお客様サポート (au Customer Support) ⇒ 調べる (Search) ⇒ 災害用伝言板 (デモ版) (Disaster Message Board (Demo Version)).
- To view the Disaster Message Board in English, select *English* from the top menu of the Disaster Message Board.

Feature Overview

Water Resistance

The CA006 complies with IPX5*¹ and IPX8*² water protection standards (JIS C 0920).

*¹ IPX5 compliant means that this cell phone continues to function as a phone after being subjected to a water jet (approximately 12.5 liters/min.) discharged from a nozzle (inner diameter: 6.3 mm), from all directions (approximately three meters from the cell phone) for three minutes or more.

*² IPX8 compliant means that this cell phone continues to function as a phone and no water seeps inside after being gently lowered into a tank filled with still tap water (at normal temperature) to the depth of 1.5 meter, and immersed at the bottom for approximately 30 minutes.

- The CA006 is resistant to fresh or tap water at normal temperature (5°C - 35°C) only.
- The CA006 is resistant to water when the external connection jack cover, microSD memory card slot cover, HDMI® Micro Connector jack cover and battery pack cover are closed firmly.
- Malfunction resulting from misuse is not covered by the warranty.

Dust Resistance

The CA006 complies with IP5X* dust protection standards (JIS C 0920).

* IP5X compliant means that this cell phone continues to function as a phone and continues to be safe to use after being placed in a chamber containing dust particles with a diameter of 75 µm or less and left for 8 hours while the contents of the chamber are subjected to agitation.

Contents

Introduction

Illustrations and Screenshots in This Manual 1

Notes on Cell Phone Use 2

Cell Phone Etiquette	2
Do Not Use the Cell Phone While Driving!.....	2
Disaster Message Board Service	3
Feature Overview	4

Contents 5

Getting Ready 7

Checking the Contents of the Box	7
Names of Parts	8
Position of CA006	9
Replacing the Battery Pack	10
Charging the Battery Pack	11
Learning the Basics	12
Turning On Power	13
Switching the Display Language to English	13
Initial Setup of E-mail and EZweb	13
Checking Your Phone Number and E-mail Address ...	13
Display Indicators	14
Using Main Menu	15
Changing Your E-mail Address	17
Security Code and Passwords	18
Using CA006 in Viewfinder Position	19

Making and Answering Calls 20

Making a Call	20
Making an International Call.....	20
Answering a Call	21
Returning a Call (Outgoing History/Incoming History) ...	21
One-ring Calls.....	21
Adjusting the Earpiece Volume during a Call	22
Turning On Manner Mode	22
Changing the Incoming Ring Tone	22
Adjusting the Incoming Ring Tone Volume	23
Turning On the Answer Memo	23

Global Function 25

Setting the Area	25
Obtaining the Latest PRL (Preferred Roaming List)...	25
Calling Japan from Overseas	26

Character Input 27

Character Entry Modes	27
Entering Alphanumeric Characters	27
Entering E-mail Addresses	28
Entering Pictograms/Decoration-Emojis/Symbols/ Face Marks	29

Address Book 30

Saving an Address Book Entry	30
Dialing from the Address Book	30
Editing Address Book Entries	30
Saving a Phone Number from the Incoming or Outgoing History	31

Mail 32

Using E-mail	32
Creating and Sending E-mail Messages	32
Reading Received E-mail Messages	33
Reading an E-mail Message with an Attached Photo or Movie	33
Replying to Received E-mail Messages	33
Rejecting Spam	34
Using C-mail	35
Creating and Sending C-mail Messages	35
Reading Received C-mail Messages	35

Camera 36

Photo Taking Tips	36
About Photo Modes	36
Taking a Photo	37
Taking a Photo in Viewfinder Position	37
About HD Movie Mode	38
Recording an HD Movie	38
About Movie Mode	39
Recording a Movie	39
Viewing Photos/HD Movies/Movies	39

EZweb 40

Accessing Sites	41
Bookmarking Frequently Accessed Pages	42
Viewing Bookmarked Pages	42
Checking Charges	43
Downloading Chaku-Uta-Full-Plus®/ Chaku-Uta-Full®/Chaku-Uta®	43

EZ News EX 44

Basic Operations	44
Setting EZ News EX	44

EZ Navi 46

Passenger Seat Navi for People in the Passenger Seat to Check the Route	46
Security Navi to Check Where Your Kids Are	46
EZ Navi Walk for When You Go Out	47
Evacuate Navi to Guide You Home or to Nearby Evacuation Areas during Disasters	48

TV (1Seg) 49

Initial Setup of au Media Tuner	50
Watching TV (1Seg)	50
Basic Operations	51
Watching TV (1Seg) in Viewfinder Position	51
Exiting the au Media Tuner	51

Teens Mode 52

Setting Teens Mode	52
--------------------------	----

In Case of Loss of Your CA006 53

Setting Conditions for Activating the Remote Ctrl Lock	53
Remotely Activating the Remote Ctrl Lock on Your CA006	53
Activating the Remote Ctrl Lock by the Security Lock Service	54



Troubleshooting 55**Index 57**

Getting Ready

Checking the Contents of the Box

The box contains the cell phone and accessories.

- Cell phone
- Battery pack

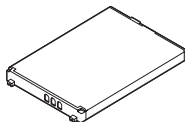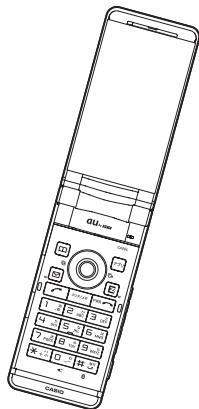


- Instruction Manual (Japanese)
- Warranty (Japanese)
- Safety Precautions (Japanese)
- Global Passport CDMA Owner's Guide (Japanese)
- Osaifu-Keitai® Guide (Japanese)
- au International Call Guide (Japanese)
- JIBUN BANK Launcher Operation Guide (Japanese)
- Wi-Fi WIN Operation Guide (Japanese)
- Dynamic Photo Guide (Japanese)
- YouTube Uploader for CASIO mobile Leaflet (Japanese)

- The following accessories are not included.


- | | | |
|-----------------------|------------------------------------|-------------------|
| - microSD memory card | - Desktop holder | - AC adapter |
| - USB cable | - Earphone jack conversion adapter | - Stereo earphone |
- Purchase a specified AC adapter (sold separately) and a commercially available microSD memory card.

Names of Parts


From the Front

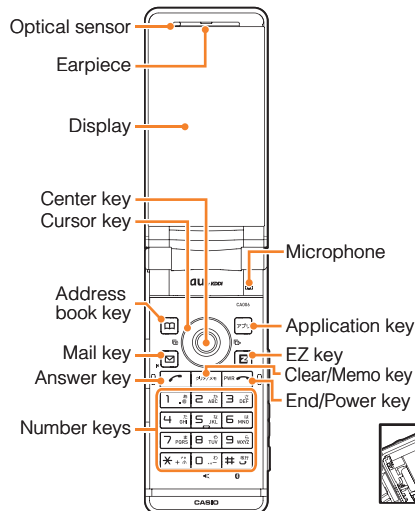

From the Back

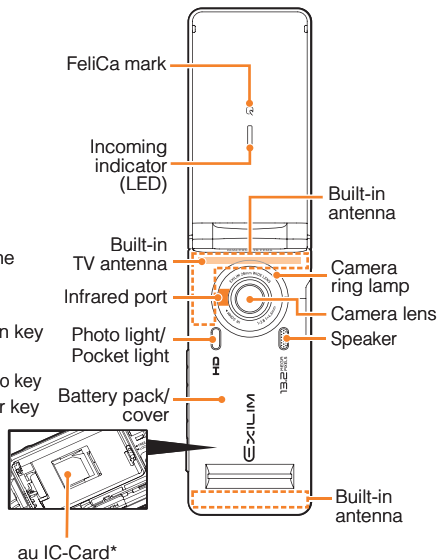

From the Sides

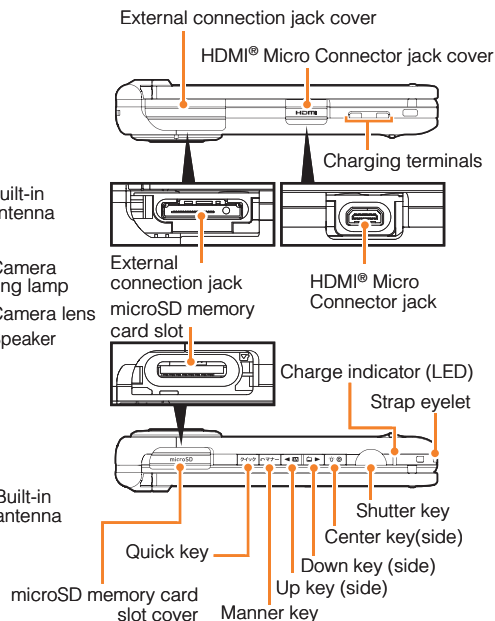


* Do not remove this card unnecessarily as your phone number is recorded on it.

Position of CA006


CA006 can not only be opened with the display facing inside, but also it can be used in Viewfinder position or Self-portrait position.

Viewfinder Position

➔ Open the cell phone so that the display stands at 90 degrees (1-1), and rotate it 180 degrees clockwise (1-2 and 1-3).

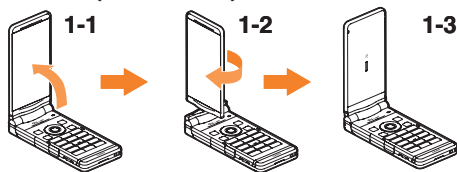

➔ Close the cell phone.

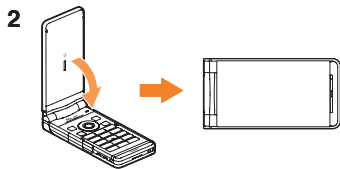


- In Illustrations 1-2 and 1-3, rotate the display in the directions of the arrows. Do not try to rotate the display when it is not in the position that Illustration 1-1 shows, or do not rotate the display over 180 degrees. Excess pressure may cause a malfunction.

- When the cell phone is in the position that Illustration 1-2 shows, do not operate the CA006 or open/close the display with force.
- To avoid an error, keep your fingers away from the keys when you are changing the position.
- Keep the display facing inside and closed when you carry the cell phone in your pocket or bag.
- The operating procedures in this manual apply when the cell phone is open and the display is facing inside, unless the cell phone's position is specified.
- To operate in Viewfinder position, press the side keys (クイック マナー ◀▶ 1/2 3/4 5/6 7/8 9/10 11/12 13/14 15/16 17/18 19/20 21/22 23/24 25/26 27/28 29/30 31/32 33/34 35/36 37/38 39/40 41/42 43/44 45/46 47/48 49/50 51/52 53/54 55/56 57/58 59/60 61/62 63/64 65/66 67/68 69/70 71/72 73/74 75/76 77/78 79/80 81/82 83/84 85/86 87/88 89/90 91/92 93/94 95/96 97/98 99/100 101/102 103/104 105/106 107/108 109/110 111/112 113/114 115/116 117/118 119/120 121/122 123/124 125/126 127/128 129/130 131/132 133/134 135/136 137/138 139/140 141/142 143/144 145/146 147/148 149/150 151/152 153/154 155/156 157/158 159/160 161/162 163/164 165/166 167/168 169/170 171/172 173/174 175/176 177/178 179/180 181/182 183/184 185/186 187/188 189/190 191/192 193/194 195/196 197/198 199/200 201/202 203/204 205/206 207/208 209/210 211/212 213/214 215/216 217/218 219/220 221/222 223/224 225/226 227/228 229/230 231/232 233/234 235/236 237/238 239/240 241/242 243/244 245/246 247/248 249/250 251/252 253/254 255/256 257/258 259/260 261/262 263/264 265/266 267/268 269/270 271/272 273/274 275/276 277/278 279/280 281/282 283/284 285/286 287/288 289/290 291/292 293/294 295/296 297/298 299/300 301/302 303/304 305/306 307/308 309/310 311/312 313/314 315/316 317/318 319/320 321/322 323/324 325/326 327/328 329/330 331/332 333/334 335/336 337/338 339/340 341/342 343/344 345/346 347/348 349/350 351/352 353/354 355/356 357/358 359/360 361/362 363/364 365/366 367/368 369/370 371/372 373/374 375/376 377/378 379/380 381/382 383/384 385/386 387/388 389/390 391/392 393/394 395/396 397/398 399/400 401/402 403/404 405/406 407/408 409/410 411/412 413/414 415/416 417/418 419/420 421/422 423/424 425/426 427/428 429/430 431/432 433/434 435/436 437/438 439/440 441/442 443/444 445/446 447/448 449/450 451/452 453/454 455/456 457/458 459/460 461/462 463/464 465/466 467/468 469/470 471/472 473/474 475/476 477/478 479/480 481/482 483/484 485/486 487/488 489/490 491/492 493/494 495/496 497/498 499/500 501/502 503/504 505/506 507/508 509/510 511/512 513/514 515/516 517/518 519/520 521/522 523/524 525/526 527/528 529/530 531/532 533/534 535/536 537/538 539/540 541/542 543/544 545/546 547/548 549/550 551/552 553/554 555/556 557/558 559/560 561/562 563/564 565/566 567/568 569/570 571/572 573/574 575/576 577/578 579/580 581/582 583/584 585/586 587/588 589/590 591/592 593/594 595/596 597/598 599/600 601/602 603/604 605/606 607/608 609/610 611/612 613/614 615/616 617/618 619/620 621/622 623/624 625/626 627/628 629/630 631/632 633/634 635/636 637/638 639/640 641/642 643/644 645/646 647/648 649/650 651/652 653/654 655/656 657/658 659/660 661/662 663/664 665/666 667/668 669/670 671/672 673/674 675/676 677/678 679/680 681/682 683/684 685/686 687/688 689/690 691/692 693/694 695/696 697/698 699/700 701/702 703/704 705/706 707/708 709/710 711/712 713/714 715/716 717/718 719/720 721/722 723/724 725/726 727/728 729/730 731/732 733/734 735/736 737/738 739/740 741/742 743/744 745/746 747/748 749/750 751/752 753/754 755/756 757/758 759/760 761/762 763/764 765/766 767/768 769/770 771/772 773/774 775/776 777/778 779/780 781/782 783/784 785/786 787/788 789/790 791/792 793/794 795/796 797/798 799/800 801/802 803/804 805/806 807/808 809/810 811/812 813/814 815/816 817/818 819/820 821/822 823/824 825/826 827/828 829/830 831/832 833/834 835/836 837/838 839/840 841/842 843/844 845/846 847/848 849/850 851/852 853/854 855/856 857/858 859/860 861/862 863/864 865/866 867/868 869/870 871/872 873/874 875/876 877/878 879/880 881/882 883/884 885/886 887/888 889/890 891/892 893/894 895/896 897/898 899/900 901/902 903/904 905/906 907/908 909/910 911/912 913/914 915/916 917/918 919/920 921/922 923/924 925/926 927/928 929/930 931/932 933/934 935/936 937/938 939/940 941/942 943/944 945/946 947/948 949/950 951/952 953/954 955/956 957/958 959/960 961/962 963/964 965/966 967/968 969/970 971/972 973/974 975/976 977/978 979/980 981/982 983/984 985/986 987/988 989/990 991/992 993/994 995/996 997/998 999/1000 1001/1002 1003/1004 1005/1006 1007/1008 1009/1010 1011/1012 1013/1014 1015/1016 1017/1018 1019/1020 1021/1022 1023/1024 1025/1026 1027/1028 1029/1030 1031/1032 1033/1034 1035/1036 1037/1038 1039/1040 1041/1042 1043/1044 1045/1046 1047/1048 1049/1050 1051/1052 1053/1054 1055/1056 1057/1058 1059/1060 1061/1062 1063/1064 1065/1066 1067/1068 1069/1070 1071/1072 1073/1074 1075/1076 1077/1078 1079/1080 1081/1082 1083/1084 1085/1086 1087/1088 1089/1090 1091/1092 1093/1094 1095/1096 1097/1098 1099/1100 1101/1102 1103/1104 1105/1106 1107/1108 1109/1110 1111/1112 1113/1114 1115/1116 1117/1118 1119/1120 1121/1122 1123/1124 1125/1126 1127/1128 1129/1130 1131/1132 1133/1134 1135/1136 1137/1138 1139/1140 1141/1142 1143/1144 1145/1146 1147/1148 1149/1150 1151/1152 1153/1154 1155/1156 1157/1158 1159/1160 1161/1162 1163/1164 1165/1166 1167/1168 1169/1170 1171/1172 1173/1174 1175/1176 1177/1178 1179/1180 1181/1182 1183/1184 1185/1186 1187/1188 1189/1190 1191/1192 1193/1194 1195/1196 1197/1198 1199/1200 1201/1202 1203/1204 1205/1206 1207/1208 1209/1210 1211/1212 1213/1214 1215/1216 1217/1218 1219/1220 1221/1222 1223/1224 1225/1226 1227/1228 1229/1230 1231/1232 1233/1234 1235/1236 1237/1238 1239/1240 1241/1242 1243/1244 1245/1246 1247/1248 1249/1250 1251/1252 1253/1254 1255/1256 1257/1258 1259/1260 1261/1262 1263/1264 1265/1266 1267/1268 1269/1270 1271/1272 1273/1274 1275/1276 1277/1278 1279/1280 1281/1282 1283/1284 1285/1286 1287/1288 1289/1290 1291/1292 1293/1294 1295/1296 1297/1298 1299/1300 1301/1302 1303/1304 1305/1306 1307/1308 1309/1310 1311/1312 1313/1314 1315/1316 1317/1318 1319/1320 1321/1322 1323/1324 1325/1326 1327/1328 1329/1330 1331/1332 1333/1334 1335/1336 1337/1338 1339/1340 1341/1342 1343/1344 1345/1346 1347/1348 1349/1350 1351/1352 1353/1354 1355/1356 1357/1358 1359/1360 1361/1362 1363/1364 1365/1366 1367/1368 1369/1370 1371/1372 1373/1374 1375/1376 1377/1378 1379/1380 1381/1382 1383/1384 1385/1386 1387/1388 1389/1390 1391/1392 1393/1394 1395/1396 1397/1398 1399/1400 1401/1402 1403/1404 1405/1406 1407/1408 1409/1410 1411/1412 1413/1414 1415/1416 1417/1418 1419/1420 1421/1422 1423/1424 1425/1426 1427/1428 1429/1430 1431/1432 1433/1434 1435/1436 1437/1438 1439/1440 1441/1442 1443/1444 1445/1446 1447/1448 1449/1450 1451/1452 1453/1454 1455/1456 1457/1458 1459/1460 1461/1462 1463/1464 1465/1466 1467/1468 1469/1470 1471/1472 1473/1474 1475/1476 1477/1478 1479/1480 1481/1482 1483/1484 1485/1486 1487/1488 1489/1490 1491/1492 1493/1494 1495/1496 1497/1498 1499/1500 1501/1502 1503/1504 1505/1506 1507/1508 1509/1510 1511/1512 1513/1514 1515/1516 1517/1518 1519/1520 1521/1522 1523/1524 1525/1526 1527/1528 1529/1530 1531/1532 1533/1534 1535/1536 1537/1538 1539/1540 1541/1542 1543/1544 1545/1546 1547/1548 1549/1550 1551/1552 1553/1554 1555/1556 1557/1558 1559/1560 1561/1562 1563/1564 1565/1566 1567/1568 1569/1570 1571/1572 1573/1574 1575/1576 1577/1578 1579/1580 1581/1582 1583/1584 1585/1586 1587/1588 1589/1590 1591/1592 1593/1594 1595/1596 1597/1598 1599/1600 1601/1602 1603/1604 1605/1606 1607/1608 1609/1610 1611/1612 1613/1614 1615/1616 1617/1618 1619/1620 1621/1622 1623/1624 1625/1626 1627/1628 1629/1630 1631/1632 1633/1634 1635/1636 1637/1638 1639/1640 1641/1642 1643/1644 1645/1646 1647/1648 1649/1650 1651/1652 1653/1654 1655/1656 1657/1658 1659/1660 1661/1662 1663/1664 1665/1666 1667/1668 1669/1670 1671/1672 1673/1674 1675/1676 1677/1678 1679/1680 1681/1682 1683/1684 1685/1686 1687/1688 1689/1690 1691/1692 1693/1694 1695/1696 1697/1698 1699/1700 1701/1702 1703/1704 1705/1706 1707/1708 1709/1710 1711/1712 1713/1714 1715/1716 1717/1718 1719/1720 1721/1722 1723/1724 1725/1726 1727/1728 1729/1730 1731/1732 1733/1734 1735/1736 1737/1738 1739/1740 1741/1742 1743/1744 1745/1746 1747/1748 1749/1750 1751/1752 1753/1754 1755/1756 1757/1758 1759/1760 1761/1762 1763/1764 1765/1766 1767/1768 1769/1770 1771/1772 1773/1774 1775/1776 1777/1778 1779/1780 1781/1782 1783/1784 1785/1786 1787/1788 1789/1790 1791/1792 1793/1794 1795/1796 1797/1798 1799/1800 1801/1802 1803/1804 1805/1806 1807/1808 1809/1810 1811/1812 1813/1814 1815/1816 1817/1818 1819/1820 1821/1822 1823/1824 1825/1826 1827/1828 1829/1830 1831/1832 1833/1834 1835/1836 1837/1838 1839/1840 1841/1842 1843/1844 1845/1846 1847/1848 1849/1850 1851/1852 1853/1854 1855/1856 1857/1858 1859/1860 1861/1862 1863/1864 1865/1866 1867/1868 1869/1870 1871/1872 1873/1874 1875/1876 1877/1878 1879/1880 1881/1882 1883/1884 1885/1886 1887/1888 1889/1890 1891/1892 1893/1894 1895/1896 1897/1898 1899/1900 1901/1902 1903/1904 1905/1906 1907/1908 1909/1910 1911/1912 1913/1914 1915/1916 1917/1918 1919/1920 1921/1922 1923/1924 1925/1926 1927/1928 1929/1930 1931/1932 1933/1934 1935/1936 1937/1938 1939/1940 1941/1942 1943/1944 1945/1946 1947/1948 1949/1950 1951/1952 1953/1954 1955/1956 1957/1958 1959/1960 1961/1962 1963/1964 1965/1966 1967/1968 1969/1970 1971/1972 1973/1974 1975/1976 1977/1978 1979/1980 1981/1982 1983/1984 1985/1986 1987/1988 1989/1990 1991/1992 1993/1994 1995/1996 1997/1998 1999/2000 2001/2002 2003/2004 2005/2006 2007/2008 2009/2010 2011/2012 2013/2014 2015/2016 2017/2018 2019/2020 2021/2022 2023/2024 2025/2026 2027/2028 2029/2030 2031/2032 2033/2034 2035/2036 2037/2038 2039/2040 2041/2042 2043/2044 2045/2046 2047/2048 2049/2050 2051/2052 2053/2054 2055/2056 2057/2058 2059/2060 2061/2062 2063/2064 2065/2066 2067/2068 2069/2070 2071/2072 2073/2074 2075/2076 2077/2078 2079/2080 2081/2082 2083/2084 2085/2086 2087/2088 2089/2090 2091/2092 2093/2094 2095/2096 2097/2098 2099/2100 2101/2102 2103/2104 2105/2106 2107/2108 2109/2110 2111/2112 2113/2114 2115/2116 2117/2118 2119/2120 2121/2122 2123/2124 2125/2126 2127/2128 2129/2130 2131/2132 2133/2134 2135/2136 2137/2138 2139/2140 2141/2142 2143/2144 2145/2146 2147/2148 2149/2150 2151/2152 2153/2154 2155/2156 2157/2158 2159/2160 2161/2162 2163/2164 2165/2166 2167/2168 2169/2170 2171/2172 2173/2174 2175/2176 2177/2178 2179/2180 2181/2182 2183/2184 2185/2186 2187/2188 2189/2190 2191/2192 2193/2194 2195/2196 2197/2198 2199/2200 2201/2202 2203/2204 2205/2206 2207/2208 2209/2210 2211/2212 2213/2214 2215/2216 2217/2218 2219/2220 2221/2222 2223/2224 2225/2226 2227/2228 2229/2230 2231/2232 2233/2234 2235/2236 2237/2238 2239/2240 2241/2242 2243/2244 2245/2246 2247/2248 2249/2250 2251/2252 2253/2254 2255/2256 2257/2258 2259/2260 2261/2262 2263/2264 2265/2266 2267/2268 2269/2270 2271/2272 2273/2274 2275/2276 2277/2278 2279/2280 2281/2282 2283/2284 2285/2286 2287/2288 2289/2290 2291/2292 2293/2294 2295/2296 2297/2298 2299/2300 2301/2302 2303/2304 2305/2306 2307/2308 2309/2310 2311/2312 2313/2314 2315/2316 2317/2318 2319/2320 2321/2322 2323/2324 2325/2326 2327/2328 2329/2330 2331/2332 2333/2334 2335/2336 2337/2338 2339/2340 2341/2342 2343/2344 2345/2346 2347/2348 2349/2350 2351/2352 2353/2354 2355/2356 2357/2358 2359/2360 2361/2362 2363/2364 2365/2366 2367/2368 2369/2370 2371/2372 2373/2374 2375/2376 2377/2378 2379/2380 2381/2382 2383/2384 2385/2386 2387/2388 2389/2390 2391/2392 2393/2394 2395/2396 2397/2398 2399/2400 2401/2402 2403/2404 2405/2406 2407/2408 2409/2410 2411/2412 2413/2414 2415/2416 2417/2418 2419/2420 2421/2422 2423/2424 2425/2426 2427/2428 2429/2430 2431/2432 2433/2434 2435/2436 2437/2438 2439/2440 2441/2442 2443/2444 2445/2446 2447/2448 2449/2450 2451/2452 2453/2454 2455/2456 2457/2458 2459/2460 2461/2462 2463/2464 2465/2466 2467/2468 2469/2470 2471/2472 2473/2474 2475/2476 2477/2478 2479/2480 2481/2482 2483/2484 2485/2486 2487/2488 2489/2490 2491/2492 2493/2494 2495/2496 2497/2498 2499/2500 2501/2502 2503/2504 2505/2506 2507/2508 2509/2510 2511/2512 2513/2514 2515/2516 2517/2518 2519/2520 2521/2522 2523/2524 2525/2526 2527/2528 2529/2530 2531/2532 2533/2534 2535/2536 2537/2538 2539/2540 2541/2542 2543/2544 2545/25

Replacing the Battery Pack

Use only the battery pack for the CA006, and be sure to install it correctly.

Note on Removing the Battery Pack Cover

Do not pull up on the battery pack cover by forcibly pushing the  part of the cover with fingers, as illustrated on the right.




If the cover becomes extremely bent, the battery pack cover is damaged, which may cause injury.

Removing the Battery Pack


➔ Pull the battery pack cover upward in the direction of the arrow to remove it from the recess in the CA006.



➔ Move the lock slider to the "FREE" position.

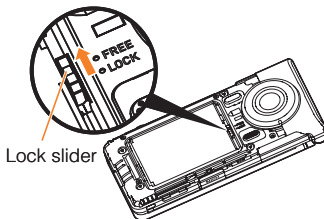


➔ Remove the battery pack by pulling up on the tab.

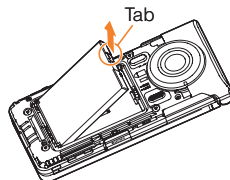


- Before removing the battery pack, turn the cell phone power off.
- When removing the battery pack, pull up on the tab. Doing otherwise may result in damage to the contacts.

Attaching the Battery Pack


➔ Move the lock slider to the "FREE" position.

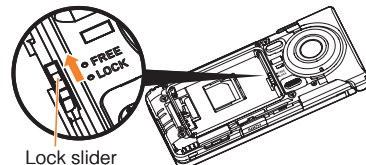


➔ With the tab of the battery pack facing up, align the contacts on the battery pack with those of the CA006, and insert the battery pack securely. Then move the lock slider to the "LOCK" position.

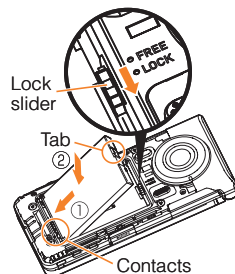

- ➔ **Insert the two tabs on the battery pack cover into the cell phone as shown at ① and close the battery pack cover as shown at ②.**

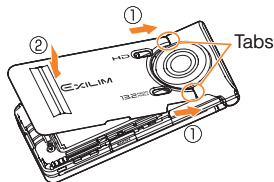

- ➔ **Press the battery pack cover at the nine locations indicated by circles in the diagram, and make sure there is no bulging over the entire battery pack cover.**

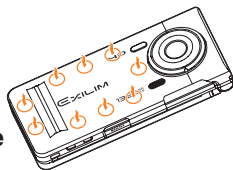


- Before attaching the battery pack, make sure that the au IC-Card is inserted securely. If the card is not completely inserted, that may lead to au IC-Card or battery pack damage.
- Failure to follow the correct procedures when attaching the battery pack may result in damage to the battery pack or battery pack cover.
- If the battery pack cover is forcibly pushed with fingers with the tabs of the battery pack cover attached on the battery pack, the tabs may be damaged.

Charging the Battery Pack

The battery pack is not fully charged at the time of purchase. Be sure to charge the battery pack before using the cell phone for the first time.

- An AC adapter is not included. Purchase a specified AC adapter (sold separately).

3 Charge indicator (LED)

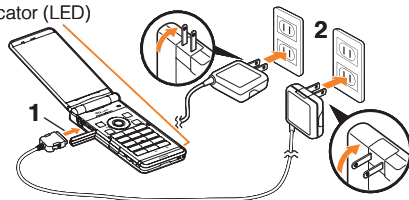

- ➔ **Connect a specified AC adapter to the cell phone with the battery pack attached.**

- Open the external connection jack cover. Check the shape of the connector of the AC adapter, and plug it straight into the external connection jack.

- ➔ **Unfold the power plug of the AC adapter and plug it into a 100 V AC power outlet.**

- ➔ **Confirm that the charge indicator (LED) lights.**

- Charging: A charge beginning sounds and the charge indicator (LED) lights.
- Charging finished: A charge completion sounds and the charge indicator (LED) goes out.

- Be sure to close the external connection jack cover when charging is finished.
- Do not pull or twist the external connection jack cover forcibly.
- Be sure to use the common AC adapter 02 (sold separately) when charging overseas.

Learning the Basics

Key Assignments

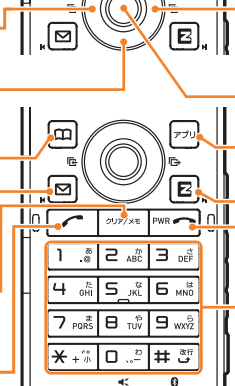


Diagram illustrating the front face of the phone with callouts to various keys and their functions:

- : Display Incoming History.
- : Display Notification window/Shortcut menu.
- : Use Address Book.
- : Display E-mail/C-mail menu.
- : Set/cancel Answer memo. Delete characters. Cancel operation.
- : Make/answer calls.
- : Display the ticker field and info pane.
- : Display Outgoing History.
- : Display Main menu.
- : Display EZapps menu.
- : Display EZ Service menu.
- : Turn power on/off. End call/communication. Cancel operation.
- : Input phone numbers and characters.

Side Key Assignments






Diagram illustrating the side face of the phone with callouts to various keys and their functions:


- : Display QuickAccess menu.
- : Set/cancel Manner Mode.
- : Activate Pocket light. (hold down for at least one second)
- : Page scroll at browser display.
- : Activate ImageAlbum. (hold down for at least one second)
- : Activate au Media Tuner. (hold down for at least one second)
- : Activate Camera. (hold down for at least one second)

For details on side key assignments, see page 19.

- If you lose track of where you are or if you make a mistake, press to return to the previous screen. Return to the standby screen by holding down for at least one second.

Hiding/Redisplaying the Notification Window


When the Notification window is displayed on the standby screen, you can temporarily hide it by pressing  (Back) and then display the Main menu by pressing .

To redisplay the hidden Notification window, press  when the standby screen is displayed.




Turning On Power

Hold down  for at least a few seconds.

- You cannot receive or make calls if  (out of range indicator) is displayed.

Turning Off Power

When the standby screen is displayed, hold down  for at least one second.

Switching the Display Language to English

You can switch the display language for function names and other items to English.

When the standby screen is displayed, press .

- ➔ Use  to select 機能 (Function) and then press  (選択 [Select]).

- ➔ Use  to select 画面表示 (Screen Display) and then press  (選択 [Select]).

- ➔ Use  to select Set Language and then press  (選択 [Select]).

- ➔ Use  to select English and then press  (Set).

Initial Setup of E-mail and EZweb

To use e-mail and EZweb, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center.

Also, before use, you need to configure initial settings. Your e-mail address is assigned automatically in the initial setup.


 
When the standby screen is displayed, press .

- ➔ Press  (OK).

After a short while, your e-mail address is displayed.

- ➔ Press  (OK).

The initial settings are complete.

- You can also configure initial settings by pressing  or .

Checking Your Phone Number and E-mail Address

When the standby screen is displayed, press  and then .

Display Indicators

Display indicators inform you of mail arrival, current settings, etc.

Display



Indicator	Description
①	Signal strength
②	Battery level
③	Wi-Fi WIN connection status Information about current overseas area Current area (e.g. USA) Calling is available Packet communication is available
④	A microSD memory card (commercially available) inserted
⑤	During a call au Media Tuner activated
⑥	EZapps activated
⑦	Connecting to EZweb

Indicator	Description
⑧	Receiving EZ News EX information
⑨	Missed calls
⑩	New or unread e-mail/C-mail
⑪	Current date and time
⑫	Ticker field
⑬	Search window
⑭	Info pane
⑮	Notification icon
⑯	Shortcut menu
⑰	Auto Lock activated/Side key disable feature on
⑱	Manner mode set
⑲	Answer memo or manner mode set

- The date and time are set automatically.





Using Main Menu

You can access various functions from the Main menu.

The Main menu patterns vary by model color. The screenshots and procedures for the Bitter Black models are used in this manual.


Model Color	Main Menu Pattern
Bitter Black	Standard
Vivid Pink	Photo
Pearl White	ahiru

Each Main menu pattern has a different set of items.

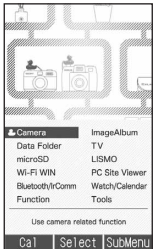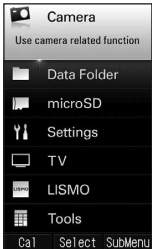Standard	Photo	ahiru	Simple
			
microSD	LISMO	Camera	Camera
Data Folder	TV	Data Folder	Data Folder
ImageAlbum	Wi-Fi WIN	microSD	microSD
Watch/Calendar	Dynamic Photo	Wi-Fi WIN	Settings
TV	HD Movie	Bluetooth/IrComm	TV
Camera	Photo	Function	LISMO
LISMO	Data Folder	ImageAlbum	Tools
PC Site Viewer	microSD	TV	Bluetooth/IrComm
Wi-Fi WIN	ImageAlbum	LISMO	
Bluetooth/IrComm	Bluetooth/IrComm	PC Site Viewer	
Function	Tools	Watch/Calendar	
Tools	Function	Tools	

Changing Your E-mail Address

You can change the account name of your e-mail address.

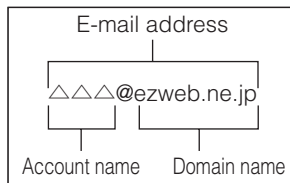

When the standby screen is displayed, press .

➔ Use to select *E-mail Setup* and then press (Select).

➔ Use to select *Change adrs/Other* and then press (Select).

The cell phone connects to the server.

➔ Use to select *Eメールアドレスの変更* (Change E-mail Address) and then press (Select).

➔ Use to select the entry box, press (Input), enter your security code, and then press (OK).

- Your security code is the four-digit number you wrote on your subscription form.
- If the security code is incorrectly entered three times consecutively during a single day, the e-mail address change operation will be disabled until the next day.

➔ Use to select *送信* (Send) and then press (Select).

➔ Use to select *承諾する* (Accept) and then press (Select).

➔ Use to select the entry box, press (Input), enter an e-mail address using single-byte alphanumeric characters, and then press (OK).

- For details on entering e-mail addresses, see page 28.

➔ Use to select *送信* (Send) and then press (Select).

➔ Use to select *OK*, press (Select) and then press (OK).

- Check that the e-mail address has been updated before pressing (OK).

- Your e-mail address cannot be changed if the new address you enter in the above procedure is already being used. In this case, enter a different e-mail address.

Security Code and Passwords

You can use a security code and other passwords described below.

Take care not to forget your security code and passwords, because they are required for performing various operations and using subscription services.

Security Code

Usage Example	①Using the Answering Service (Voice Mail) and Call Transfer remotely from a fixed-line phone ②Making inquiries, applications, and changes while using au Customer Service Center voice guidance, au web pages, and EZweb ③Changing the settings of <i>Spam Filter</i> or <i>Change adrs/Other</i> under E-mail Setup
Initial Setting	The four-digit number you wrote on your subscription form

Lock No.

Usage Example	Changing various settings of the cell phone
Initial Setting	1234






EZ Password









Usage Example	Subscribing or canceling subscriptions to EZweb fee-based contents
Initial Setting	The four-digit number you wrote on your subscription form



Premium EZ Password

Usage Example	①Subscribing or canceling subscriptions to EZweb fee-based contents paid by <i>まとめてau 支払い</i> (au Collective Payment Service) ②Purchasing products from EZweb sites using <i>まとめてau 支払い</i> (au Collective Payment Service)
Initial Setting	The four-digit number you wrote on your subscription form

   Using CA006 in Viewfinder Position

You can operate CA006 by side keys when CA006 is in Viewfinder position. Press   instead of pressing . Press  instead of pressing . Using side keys, you can use following functions.


Side Key	Main Functions
	Display QuickAccess Menu.
	<ul style="list-style-type: none"> When the standby screen is displayed, press this key to display manner mode menu. When the standby screen is displayed, hold down this key for at least one second to turn on/off manner mode. Take an incoming call by Answer memo. Hold down this key for at least one second during a call, to end the call. Use this key instead of  to return to the previous screen.
 	<ul style="list-style-type: none"> When the standby screen is displayed, press these keys to select EZ News EX ticker/window, search window or shortcut icon. Use these keys instead of  to move the cursor on the screen. When the standby screen is displayed, hold down  for at least one second to activate ImageAlbum. When the standby screen is displayed, hold down  for at least one second to activate au Media Tuner.

 	<ul style="list-style-type: none"> When the standby screen is displayed, press this key to display the main menu. When the standby screen is displayed, hold down this key for at least one second to activate pocket light. Hold down this key for at least one second during a call, to switch on/off the microphone. Operate the function which is displayed below center of the screen.
	<ul style="list-style-type: none"> When the standby screen is displayed, press this key to display the EXILIM menu. When the standby screen is displayed, hold down this key for at least one second to activate photo shooting. Use this key as a shutter/recording start key when shooting photos/movies. Save photos/movies.

- See page 9 for how to set CA006 to Viewfinder position.

Making and Answering Calls






Making a Call

When the standby screen is displayed, use  to  to enter a phone number.

- When calling to a fixed-line phone, you also need to enter the area code.

➔ Press .

- To end the call, press .

- After you enter a phone number, you can add 184 or 186 to the phone number as follows:
 - ➔ Press  (Call).
 - ➔ Use  to select *Add Special No.* and then press  (OK).
 - ➔ Use  to select *184* or *186* and then press  (Add).
- 184:* When you do not want to inform the other party of your phone number.
- 186:* When you want to inform the other party of your phone number.
- During a call in Viewfinder position, check the earpiece position to hear the caller's voice properly.
- During a call, it is recommended to use your cell phone opened.


Making an International Call

001 International Call Service

Available without any additional application

Example: To call 212-123-△△△△ in the USA

Enter the access code, a country code, area code and phone number, and then press .

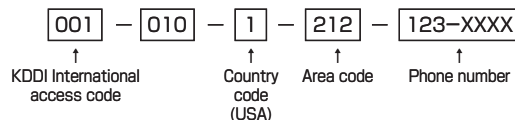

- International call charges are billed together with monthly local call charges.
- For more information on 001 International Call Service, dial either of the following numbers:
From au cell phones (toll-free):
157 (area code not required)
From fixed-line phones (toll-free):
0077-7-111
(Open 9:00 to 20:00 everyday)

Answering a Call

To answer a call, press .

- To end the call, press .

- During a call in Viewfinder position, check the earpiece position to hear the caller's voice properly.
- During a call, it is recommended to use your cell phone opened.

Display When a Call is Received


The phone number of the caller appears.


 
If the caller's phone number and name are in the address book, the name is also displayed.

When the phone number of the caller is not displayed, one of the following indicators may appear.

Indicator	Meaning
<i>ID Unsent</i>	The caller did not send a Caller ID.
<i>Payphone</i>	The call is from a pay phone.
<i>Not Support</i>	The call is from a phone that does not support Caller ID.

Missed Call Notification


If you did not answer a call,  and *Missed Call* are displayed to let you know that you missed a call.

To check the caller's phone number, use  to select *Missed Call* and then press  (Select). You can then return the call (see the procedure on the right).

Returning a Call (Outgoing History/Incoming History)

Example: Returning a call to a phone number in the incoming history


When the standby screen is displayed, press .

- Press  while the standby screen is displayed to display the Outgoing History screen.

➔ Use  to select the phone number you want to call and then press  (Detail).

- Press  to display the Outgoing History screen.

➔ Press .


- The cell phone can store up to 50 phone numbers in each of the incoming and outgoing history.
- If  is pressed on the Incoming or Outgoing History screen, a list of Frequency of Call is displayed. You can call by selecting from this list.

One-ring Calls

What is a One-ring Call?



A one-ring call is a call from an unknown caller that only rings once, causing it to be stored in the incoming history. One-ring calls are often used to get you to return the call, which will connect you to a dating service or some other service that charges you at high rates.

One-ring Indicator

 (red) indicator on the Incoming History screen indicates you have received a one-ring call (a call rang for three seconds or shorter). Be careful when you return a call to an unknown caller.

Adjusting the Earpiece Volume during a Call



During a call, use .

-  : Increases the volume.
-  : Decreases the volume.

 
➔ Press  (OK).



Turning On Manner Mode

When the standby screen is displayed, hold down  for at least one second.

This turns on manner mode, and displays  on the standby screen. This also turns on Answer memo, which is indicated by  on the standby screen.

Turning Off Manner Mode

When the standby screen is displayed, hold down  for at least one second.



Turning off manner mode causes  to disappear from the standby screen. Answer memo is also turned off, which is indicated by  disappearing from the standby screen.



- Even in manner mode, the cell phone still emits a sound when autofocusing, a shutter sound when you take a photo.



Changing the Incoming Ring Tone


When the standby screen is displayed, press .

➔ Use  to select *Function* and then press  (Select).

➔ Use  to select *Sound/Vib/Lamp* and then press  (Select).

➔ Use  to select *Incoming Setup* and then press  (Select).


➔ Use  to select *Incoming Call* and then press  (Select).

➔ Use  to select  (Ringtone) and then press  (Select).

➔ Use  to select *Original* and then press  (Select).

➔ Use  to select a ring tone and then press  (Set).















The incoming ring tone is set.



- If you press  (Play), the tone plays.

➔ Press  (OK).

Adjusting the Incoming Ring Tone Volume

When the standby screen is displayed, press .


- ➔ Use  to select *Function* and then press  (Select).
- ➔ Use  to select *Sound/Vib/Lamp* and then press  (Select).
- ➔ Use  to select *Incoming Setup* and then press  (Select).
- ➔ Use  to select *Incoming Call* and then press  (Select).
- ➔ Use  to select  (Ringtone Volume) and then press  (Select).
- ➔ Use  to adjust the volume and then press  (Set).
 - Each press of  changes the volume one step.

<i>STEP</i> ↑	The ring tone volume gradually increases.
<i>STEP</i> ↓	The ring tone volume gradually decreases.
<i>Level5</i>   <i>Level1</i>	The ring tone sounds at the set volume.
<i>OFF</i>	The ring tone does not sound.

 

➔ Press  (OK).

Turning On the Answer Memo

When the standby screen is displayed, hold down  for at least one second.

 is displayed on the standby screen.




 

Turning Off the Answer Memo

When the standby screen is displayed, hold down  for at least one second. The answer memo is turned off and  disappears from the standby screen.

- The cell phone can record a maximum of ten messages, each up to 60 seconds long.
- Answer memo is a function that automatically answers calls and allows callers to record messages. Use the Answering Service (Voice Mail) when your phone is turned off or when you are in a location where a signal cannot be received.






 






Playing a Message

If a message is recorded, *Answer Memo* appears on the standby screen.

- ➔ Use  to select *Answer Memo* and then press  (Select).
- ➔ Use  to select the message you want to play and then press  (Play).
 - To stop playing the message, press  (Stop).

Deleting a Message

When the standby screen is displayed, press .












- ➔ Use  to select *Answer Memo* and then press  (Select).
- ➔ Use  to select *Answer Memo List* and then press  (Select).
- ➔ Use  to select the message you want to delete and then press  (SubMenu).
- ➔ Use  to select *Delete* and then press  (OK).
- ➔ Use  to select *Delete One* and then press  (OK).
- ➔ Use  to select *YES* and then press  (OK).

Global Function

The CA006 supports Global Passport CDMA services. You can use your CA006 overseas without any additional application.

Setting the Area

When the standby screen is displayed, press .



 


 

 
 
 

 

- ➔ Use  to select *Tools* and then press  (Select).
- ➔ Use  to select *GLOBAL Function* and then press  (Select).
Precautions are displayed.
- ➔ Check the precautions and then press  (OK).
- ➔ Use  to select *Area Setting* and then press  (Select).
- ➔ Use  to select *Overseas* and then press  (Select).
- ➔ Use  to select *YES* and then press  (OK).

- Some functions are not available when *Area Setting* is not set to *Japan*.

Obtaining the Latest PRL (Preferred Roaming List)


Manually update and set the PRL (preferred roaming list) before traveling abroad.

When the standby screen is displayed, press .


- ➔ Use  to select *Tools* and then press  (Select).
- ➔ Use  to select *GLOBAL Function* and then press  (Select).
Precautions are displayed.
- ➔ Check the precautions and then press  (OK).
- ➔ Use  to select *PRL Setting* and then press  (Select).
- ➔ Use  to select *PRL Manual Update* and then press  (Select).
- ➔ Use  to select *OK* and then press  (OK).
The cell phone connects to the server.
- ➔ Use  to select *PRLダウンロード* (Download PRL) and then press  (ダウンロード [Download]).
The latest PRL is downloaded.

- The PRL (preferred roaming list) is the area information of overseas carriers offering international roaming service in partnership with KDDI (au).
- To obtain (download) the PRL, you need to subscribe to EZweb and make initial settings (see page 13) while in Japan.

Calling Japan from Overseas

When the standby screen is displayed, use  to  to enter a phone number.

➔ Press  (Call).

➔ Use  to select *Voice Call* and then press  (OK).


➔ Use  to select *Call to Japan* and then press  (OK).

➔ Press  or  (Call).



 
 
 

 
 
 
- When you make an international call from Japan to a Global Passport CDMA-compatible cell phone, you can do it in the same way as making domestic calls within Japan.



Character Input

Character Entry Modes

When a character entry screen is displayed, you can select a character entry mode if you press  (Char.Type).



Menu Items


 






 
 

 
-  : Kanji conversion mode
-  : Double-byte katakana mode
-  : Single-byte katakana mode
-  : Lowercase alphanumeric (double-byte) mode
-  : Lowercase alphanumeric (single-byte) mode
-  : Uppercase alphanumeric (double-byte) mode
-  : Uppercase alphanumeric (single-byte) mode
-  : Double-byte number mode
-  : Single-byte number mode


Use  to select a character entry mode and then press  (OK).

- The character entry mode that you can select is different depending on the current character entry screen.


Entering Alphanumeric Characters

You can use the keys  to  to enter characters. More than one character is assigned to each key. The following table shows the key assignment for entering characters.


 

	Number of Times to Press the Key											
Key	1	2	3	4	5	6	7	8	9	10	11	12
	.	@	—	_	/	:	~	1				
	a	b	c	A	B	C	2					
	d	e	f	D	E	F	3					
	g	h	i	G	H	I	4					
	j	k	l	J	K	L	5					
	m	n	o	M	N	O	6					
	p	q	r	s	P	Q	R	S	7			
	t	u	v	T	U	V	8					
	w	x	y	z	W	X	Y	Z	9			
	0	Inputs symbols										
	Inputs symbols (switches an unconfirmed character between uppercase and lowercase).											
	Adds a line break (displays characters in the opposite order).											

When you change your e-mail address, you cannot use the characters in  for the account name (part of the address to the left of @).

■ Entering Two or More Characters Assigned to the Same Key

After you enter the first character, press  and then enter the next character.

■ Deleting Characters

To delete one character at a time, move the cursor to the character you want to delete and then press . To delete all characters to the right of the cursor, hold down  for at least one second. If there are no characters to the right of the cursor, holding down  will delete all the characters.

■ Starting a New Line

Press .

- Certain functions such as C-mail do not support entering new lines.

■ Entering E-mail Addresses





 


 

■ E-mail Address Compatible Characters

- Before you enter an e-mail address, switch to the lowercase alphanumeric (single-byte) mode.
- When changing your e-mail address, you can enter up to 30 single-byte alphanumeric and symbol characters for the account name (part to the left of @). Note the following:
 - Uppercase characters cannot be used.
 - Period (.) or zero (0) cannot be used as the first character.

■ How to Enter E-mail Addresses

Example: Entering "taro.23@kddi.co.jp"






Enter "taro.23".







- t : Press  once.
 a : Press  once.
 r : Press  three times.
 o : Press  three times.
 . : Press  once.
 2 : Press  once and then .
 3 : Press  once and then .

➔ Enter "@".

- @ : Press  twice.


➔ Enter "kddi".








- k : Press  twice.
 d : Press  once and then .
 d : Press  once.
 i : Press  three times.

- ➔ Press  (SubMenu).
 - ➔ Use  to select *Phrase* and then press  (OK).
 - ➔ Use  (Category) to select *Internet*.
 - ➔ Use  to select *.co.jp* and then press  (Select).
- ".co.jp" is entered.

Entering Pictograms/Decoration-Emojis/Symbols/Face Marks

Example: Entering pictograms

When a character entry screen is displayed, press .

- ➔ Use  to select the pictogram you want to enter and then press  (Select).
 - You can enter pictograms consecutively if you press  (Repeat) instead of  (Select).
- Each time you press  in the character entry screen, the character entry mode changes in following order:
Pictograms → Decoration-Emojis (e-mail only) → Symbols → Face Marks...
 - You can switch categories of pictograms, Decoration-Emojis or face marks by pressing  /  on each selection screen.



 
Address Book


Saving an Address Book Entry




When the standby screen is displayed, hold down  for at least one second.

➔ Use  to select  [Name] and then press  (Select).

➔ Enter a name and then press  (OK).
The  [Reading] for the name is entered automatically.


➔ Use  to select  [Phone No.1] and then press  (Select).

 ➔ Enter a phone number and then press  (OK).
• If the phone number is for a fixed-line phone, enter the phone number starting with the area code.

➔ Use  to select a phone number type and then press  (Select).
• Follow the next step to enter an e-mail address. If you do not want to enter an e-mail address, press  (Reg).

➔ Use  to select  [E-mail Address1] and then press  (Select).

➔ Enter an e-mail address and then press  (OK).



➔ Use  to select an e-mail address type and then press  (Select).


➔ Press  (Reg).

- The address book can store up to 1,000 entries.
- The cell phone automatically saves an entry to the lowest available memory number from 000 to 999.
- You can save three phone numbers and three e-mail addresses for each address book entry.
- You can also assign a group No., and enter birthday, address, and other information.

Dialing from the Address Book

When the standby screen is displayed, press .

➔ Use  to select the entry containing the phone number you want to dial and then press  (Detail).

➔ Use  to select the phone number and then press  (Select).

➔ Use  to select *Voice Call* and then press  (OK).

Editing Address Book Entries

When the standby screen is displayed, press .

➔ Select an entry and press  (Detail).



➔ Press  (Edit).

➔ Edit the contents and then press  (Reg).

➔ Use  to select *Overwrite* and then press  (OK).

Saving a Phone Number from the Incoming or Outgoing History

Example: Saving a phone number from the incoming history to the address book

When the standby screen is displayed, press  and use  to select the phone number you want to save.

➔ Press  (SubMenu).

➔ Use  to select *Reg to Adrs Book* and then press  (OK).

➔ Use  to select *Register New* and then press  (Select).

➔ Use  to select a phone number type and then press  (Select).

- For details on saving an address book entry, see page 30.

Using E-mail

To use e-mail, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center. Also, before use, you need to configure initial settings.

You can send and receive e-mail with other cell phones that support e-mail, and with PCs. In addition to text messages of up to 5,000 double-byte (or 10,000 single-byte) characters, you can also send photos and movies by e-mail.



- The packet communication charge for sending and receiving e-mail applies to the amount of data sent and received.
- You can send an e-mail message to up to 30 different addresses at one time.
- You can send up to 1,000 e-mail messages per day (a message with multiple recipients is counted as more than one message).
- Sending and receiving e-mail messages that include attachment data may take a while.

Creating and Sending E-mail Messages

When the standby screen is displayed, press .

➔ Use  to select *Create New* and then press  (Select).



➔ Use  to select *Address* and then press  (Select).

➔ Use  to select *Quote Adrs Book* and then press  (Select).

➔ Use  to select an address book entry and then press  (Select).

➔ Use  to select an address and then press  (Select).

This step is not necessary if the number of mail addresses registered in the selected address book entry is only one.

➔ Use  to select *Subject* and then press  (Select).

➔ Enter a subject and then press  (OK).

- You cannot enter single-byte katakana characters or a new line in a subject.

➔ Use  to select *Text* and then press  (Select).



➔ Enter text and then press  (OK).

- You cannot enter single-byte katakana characters.

➔ Press   (Send).









Reading Received E-mail Messages

When you receive an e-mail message, *E-mail* appears on the standby screen.




- ➔ Use  to select *E-mail* and then press  (Select).

The message screen of received mail is displayed.

When you receive multiple e-mail messages, *E-mail* appears on the standby screen.

- ➔ Use  to select *E-mail* and then press  (Select).
- ➔ Use  to select the folder that has a new message you want to read and then press  (Select).
- : Indicates a read message.
 - : Indicates an unread message.
- ➔ Use  to select the new message and then press  (Select).

Reading an E-mail Message from the E-mail Menu






When the standby screen is displayed, press  to display the E-mail menu, use  to select *Inbox* and then press  (Select).

 
For subsequent operations, see "Reading Received E-mail Messages" above.

Reading an E-mail Message with an Attached Photo or Movie

Example: Viewing an attached photo








Display the e-mail message that has an attached photo (above).

- ➔ Use  to select the file name and then press  (Select).
- ➔ Use  to select the file name and then press  (Receive).
- ➔ Press  (Play).

- Selecting the file name or pressing  (Receive) may be unnecessary for some files to be displayed, depending on the file size.

Replying to Received E-mail Messages

When the standby screen is displayed, press .

- ➔ Use  to select *Inbox* and then press  (Select).
- ➔ Use  to select a folder and then press  (Select).
- ➔ Use  to select the message you want to reply to and then press  (Select).
- ➔ Press  (Reply).

"Re:" is prefixed to the subject, and the text of the message is quoted.

- ➔ Refer to "Creating and Sending E-mail Messages" (page 32) for subsequent operations.

Rejecting Spam








Setting mail filters to reject spam is recommended. The サポート設定 (Supportive Settings) helps you to set mail filters easily by answering questions that appear on the screen.





- Some Spam Filter setting methods will change in December 2010. See "For customers bothered by unwanted spam (in Japanese only)" on the au website for instructions on how to make settings after the change.

Setting Mail Filters

Example: Connecting to サポート設定 (Supportive Settings)

When the standby screen is displayed, press .

- ➔ Use  to select *Spam Filter* and then press .
- ➔ Use  to select 次へ (Next) and then press .
- ➔ Use  to select the entry box and then press .
- ➔ Enter your security code and then press .

- ➔ Use  to select 送信 (Send) and then press .
- ➔ Use  to select サポート設定 (Supportive Settings) and then press .

カンタン設定 (Simple Settings)

サポート設定 (Supportive Settings)	Set the filter by answering questions This is recommended for users who want to configure settings while confirming conditions.
フィルター レベル (高) Filter Level (High)	Shut out all mail from PCs This is recommended for users who only want to send mail to and receive mail from cell phones.
フィルター レベル (中) Filter Level (Medium)	Block spoof e-mail and mail from specific addresses This is recommended for users bothered by certain senders or spam mail.
フィルター レベル (低) Filter Level (Low)	Block spoof e-mail This is the minimum level recommended for all users.

- You can also prevent spam by changing your e-mail address. For details on changing your e-mail address, see page 17.
- This procedure and カンタン設定 (Simple Settings) menu will be changed after the renovation of the E-mail filter service scheduled for December 2010.

Using C-mail

C-mail is a service that uses phone numbers as addresses to exchange messages between au cell phones that support C-mail. A C-mail message can contain up to 50 double-byte (or 100 single-byte) characters.

- The C-mail send charge applies when sending C-mail.









C-mail Safety Block






C-mail safety block is a function that allows you to reject C-mails that include URLs (<http://△△△>, <https://△△△>) or phone numbers in the C-mail message text.

C-mail safety block is valid by default. Cancel the setting if you want to receive C-mails that include URLs and phone numbers in the message text.

Creating and Sending C-mail Messages









When the standby screen is displayed, hold down  for at least one second.

- ➔ Use  to select *Create New* and then press  (Select).
- ➔ Enter text and then press  (OK).
- ➔ Use  to select  [Address] and then press  (Edit).
- ➔ Use  to select *Quote Adrs Book* and then press  (OK).




- ➔ Use  to select an address book entry and then press  (Detail).
- ➔ Use  to select a phone number and then press  (Select).
- ➔ Press  (Send).

Reading Received C-mail Messages

When you receive a C-mail message, *C-mail* appears on the standby screen.

- ➔ Use  to select *C-mail* and then press  (Select).
- ➔ Use  to select the folder that has a new message you want to read and then press  (Select).
 - : Indicates a read message.
 - : Indicates an unread message.
- ➔ Use  to select the new message and then press  (View).

Reading a C-mail Message from the C-mail Menu

When the standby screen is displayed, hold down  for at least one second to display the C-mail menu, use  to select *Inbox* and then press  (Select).

For subsequent operations, see "Reading Received C-mail Messages" above.


Camera

Your cell phone has a CMOS camera with 13.16 effective megapixels for shooting photos, HD movies and movies. You can use the self-timer and autofocus. Shot images can be used for the standby screen, and attached to e-mail messages.


Photo Taking Tips

When taking photos, frame the subject within the display and hold the cell phone steady with both hands to avoid shaking.

Regular Open Position

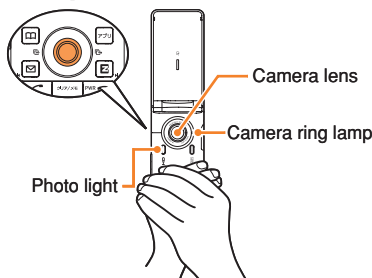

Viewfinder Position

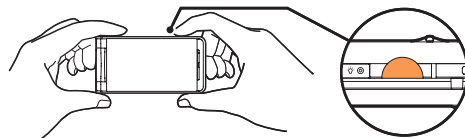

- Take care not to cover the lens and optical sensor with a strap or finger.

About Photo Modes

The following modes are available for taking photos. W.paper (F.Wide) is set for W.paper mode and 13M is set for DSC mode at the time of purchase.

Mode	Shot Size	Storage Location
W.paper Mode	W.paper (Normal)	The <i>Photo Folder</i> in the Data Folder of the cell phone
	W.paper (F.Wide)	
DSC Mode	0.3M	The <i>DSC</i> folder in the Data Folder of a microSD memory card*
	2M	
	3M	
	5M	
	8M	
	9M (FullWide)	
	13M	
	Auto Resize	

* When a microSD memory card (commercially available) is not inserted, the files are saved to the Data Folder of the cell phone.

- If you set the shot size to "Auto Resize," the photo will be shot in the most suitable size within 0.3M/2M/3M/5M/8M/13M according to the zoom setting.

Taking a Photo



When the standby screen is displayed, hold down  for at least one second.

The monitor screen appears.

➔ **Press  (Shoot).**


The preview screen is displayed.

Using to Take a Photo

Point the AF frame at the subject, press  halfway to focus, and then press  fully to release the shutter.

Saving a Photo

Press  (Save) on the preview screen.

- If you do not want to save the photo, press  in the preview screen.

Taking a Photo in Viewfinder Position

When the standby screen is displayed, set CA006 to Viewfinder position.

The EXILIM menu is displayed.


See page 9 on how to set CA006 to Viewfinder position.

➔ **Press .**

The monitor screen appears.




 
 
➔ **Press .**

The preview screen is displayed.

- You can also display the EXILIM menu by pressing  in Viewfinder position while the standby screen is displayed.


Using the EXILIM Menu

By default, the EXILIM menu is displayed for approximately 60 seconds by setting CA006 to Viewfinder position when the standby screen or the main menu is displayed.

Key Operation	Description
	<ul style="list-style-type: none"> • Activates photo shooting. • Activates HD movie recording (when held down for at least one second).
	<ul style="list-style-type: none"> • Shows photos taken. • Shows recorded HD movies (when held down for at least one second).
	Activates Image Album.
	Displays recommended shooting menu.
	Returns to the standby screen or main menu.

Saving a Photo

Press  on the preview screen.

- If you do not want to save the photo, press  on the preview screen.

About HD Movie Mode

HD movie recording allows you to record movies in high definition. You can use a recording mode of your chose.

Recording Mode	Recording Size: Width × Height (dot)	Recording Time
High-Quality	1,280 × 720	Up to approx. 30 min.*
Standard		Up to approx. 45 min.*
Long-Time		Up to approx. 60 min.*

* Up to 2 GB of HD movie data can be saved for one recording. The recording times shown here are times for recording approx. 2 GB when a commercially available microSD memory card (4 GB to 32 GB) is set. However, the recording time varies depending on the recording conditions. Recording times may also be shorter depending on the remaining battery charge.

- The speed class of the most recommended microSDHC memory card is Class 4 or above. A lower performance card may cause abnormal recording or audio and visual failure during HD movie playback.

 
Recording an HD Movie

When the standby screen is displayed, press .

➔ Use  to select *Camera*, and then press .

➔ Use  to select *HD Movie*, and then press .



The HD movie monitor screen appears. Turn the CA006 sideways as indicated by the icon showing orientation the movie will be saved in.




 
 
《How to hold sideways》

➔ Press  (Record) / .

The HD movie recording screen is displayed.

➔ Recording stops when you press  (Stop) /  or when the maximum recording time elapses.

The HD movie is saved to the HD Movie Folder in the Data Folder of the cell phone or the microSD memory card, and the display returns to the HD movie monitor screen.

- If the cell phone is closed or if the style is switched to the Viewfinder position while recording an HD movie, recording will end and the HD movie will be saved to the HD Movie Folder in the Data Folder of the cell phone or the microSD memory card.
- If you attempt to charge while HD Movie is running,  will display on the screen and you will not be able to charge. End HD Movie to charge.
- If remaining battery charge becomes low while running HD Movie (when  or  is displayed), you should end HD Movie and charge as soon as possible. Note that continuing to use HD Movie may result in the power turning off.

About Movie Mode

You can select the size of a movie by changing recording modes.

○ : Attachable to an e-mail

△ : Attachable to an e-mail after the size is changed

Recording Mode	Size: Width X Height (dot)	Recording Time	E-mail Attachment
QCIF	176 × 144	Up to 15 sec.	○
QVGA	320 × 240	Up to approx. 120 min.*	△
VGA	640 × 480	Up to approx. 90 min.*	△

* The maximum time that you can continuously record a movie using a commercially available microSD memory card (512 MB to 32 GB). However, the recording time varies depending on the recording conditions or the capacity of the microSD memory card you are using.

Recording a Movie

When the standby screen is displayed, press .



➔ Use  to select *Camera*, and then press .

➔ Use  to select *Movie*, and then press .

The movie monitor screen appears.

➔ Press  (Record) / .



The movie recording screen is displayed.

➔ Recording stops when you press  (Stop) /  or when the maximum recording time elapses.

The movie preview screen is displayed.

➔ Press  (Save) / .

A movie is saved to the Movie Folder in the Data Folder of the cell phone or the microSD memory card, and the display returns to the movie monitor screen.



- If recording QVGA/VGA movies, the movie is saved when you press  (Stop) /  or recording ends automatically.

Viewing Photos/HD Movies/Movies

When the standby screen is displayed, press .

➔ Use  to select *Data Folder* and then press .

➔ Use  to select *Photo Folder/HDMovieFolder/Movie Folder* and then press .

➔ Use  to select a folder and then press .

➔ Use  to select the photo/HD movie/movie you want to view and then press .

EZweb is an information service that allows you to enjoy browsing the Internet on your cell phone. You can also download Chaku-Uta-Full-Plus®, Chaku-Uta-Full®, Chaku-Uta®, news, and other contents from web pages.

To use EZweb, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center. Also, before use, you need to configure initial settings.

- The packet communication charge for EZweb connection applies to the amount of data sent and received, not to the length of time connected.
- In addition to communication charges, some sites charge for providing information.

Accessing Sites

■ Viewing the au one Top

You can access EZweb from the au one Top. A variety of useful and fun sites are available on EZweb. When the standby screen is displayed, press **[E]**, use **[↑]** to select *Top Menu/Search* and then press **[Enter]** (Select).



auお客さまサポート (au Customer Support)
Provides information about charges, various applications, au online manual and notices from au.

キーワード検索機能 (Search by Keyword)
Provides a search function for searching for information by keyword.

メニューリスト (Menu List)
Provides a list of various content provider sites.

ニュース・天気・占い・エンタメ・ライフ・ショッピング (News, Weather, Horoscope, Entertainment, Life & Shopping)
Provides automatic updates of the latest information.

知る (Tips & Tools)
Provides information on sports and stock prices, as well as useful tools such as maps and dictionaries.

楽しむ (Hobbies & Culture)
Provides the latest information, such as games, music, books, hobbies and entertainment.

買う (Shopping & Auctions)
Provides a list of shopping and auction sites available from your cell phone.

暮らし (Lifestyle)
Provides travel, restaurant and other lifestyle-oriented information.

使える (Useful)
Provides interesting and useful information that you can use for mails.

乗換・テレビ (Transportation & TV)
Provides direct access to these au one services.

ラボ／セカイカメラ (au one Laboratory/ Sekai Camera)
Delivers the beta versions of various services before their official release.

とくする情報 (Valuable Information)
Presents gifts and push information to the EZweb subscriber for free.



au style
Introduces information and sites that au recommends.



オープンサイト (Open Site)
Introduces open sites.

災害用伝言板 (Disaster Message Board)
Register and confirm safety information in time of disaster.








ENGLISH
Introduces English sites.

Basic Operations


Use  to select the site you want to access and then press  (OK).



Press  or  to return to the previous screen. Hold down either key for at least one second to return to the au one Top.

The following describes the basic operations that are available while accessing sites.

Key Operation	Description
	Exits EZweb.
	Moves the cursor up and down. When there is data available above or below the current screen, scrolls up and down the screen one line at a time.
	When there is data available above or below the current screen, scrolls the screen page by page.  : Scrolls one page up.  : Scrolls one page down. On pages that contain certain types of content, such as Flash content, scrolling page by page may not be possible.
 , 	Returns to the previous screen.

Bookmarking Frequently Accessed Pages

When the page you want to bookmark is displayed, press  (BrowserMenu).

➔ Use  to select *Favorites* and then press  (OK).

➔ Use  to select *Add Bookmark* and then press  (OK).

- Some pages cannot be bookmarked.

➔ Press  (Reg).



The displayed page is bookmarked, and its title and URL are added to the Bookmark.

- The Bookmark can contain up to 100 titles and URLs.

Viewing Bookmarked Pages








When the standby screen is displayed, press  and then use  to select *EZweb*.

➔ Use  to select *Bookmark(s)* and then press  (Select).

➔ Use  to select the bookmark for the page you want to view and then press  (Connect).
The cell phone connects to the site.





Checking Charges



When the standby screen is displayed, press .

- ➔ Use  to select *Function* and then press  (Select).
- ➔ Use  to select *Time/Toll/Sub* and then press  (Select).
- ➔ Use  to select *Inquire Toll* and then press  (Select).
- ➔ Use  to select *OK*.
 - Select the item you want to check and then follow the on-screen instructions.

Downloading Chaku-Uta-Full-Plus®/Chaku-Uta-Full®/Chaku-Uta®

When the standby screen is displayed, press  and then use  to select *EZweb*.

- ➔ Use  to select *Top Menu/Search* and then press  (Select).
- ➔ Use  to select *メニューリスト (Menu List)* and then press  (OK).

- ➔ Use  to select *着うたフルプラス (Chaku-Uta-Full-Plus®)*, *着うたフル・ビデオクリップ (Chaku-Uta-Full®・Video Clip)* or *着うた (Chaku-Uta®)* and then press  (Select).

- ➔ Use  to select the site you want to access and then press  (Select).

The download instructions appear.

- Fee-based information sites require entry of EZ password or Premium EZ password. Follow the on-screen instructions to enter either password. See page 18 for details.

- ➔ **Follow the on-screen instructions.**

Download is completed.

- Downloaded data is saved automatically to the Data Folder.

- ➔ Press  (**Play**).

The downloaded Chaku-Uta-Full-Plus®, Chaku-Uta-Full® or Chaku-Uta® plays.


- This procedure is only an example for the purpose of explanation and may differ from actual procedures. Follow the instructions on the site from which you want to download the data.

Use the EZ News EX to display on the standby screen the latest news, weather forecast, horoscope and others that are delivered free of packet communication charges. You can view detailed information on a news item or weather forecast by selecting the ticker field or info pane.


To make all the EZ News EX services available to you, you need to fill out a separate application form (and pay information charges).

You can use the EZ News EX by making a few simple settings following the EZweb initial setup.

Basic Operations

When the standby screen is displayed, press  to select the ticker field.

You can view detailed information on a news item or weather forecast.

- You can also select the info pane.
- The EZ News EX information is automatically received at no charge. Note, however, that packet communication charges may be incurred for manual updates and connecting to EZweb sites. In this case, a confirmation screen for network connection is displayed.
- The EZ News EX information is updated at regular time intervals.  appears while receiving information.

Setting EZ News EX

The EZ News EX is available free of charge. You have only to make a few simple settings. After following the procedure in "Initial Setup of E-mail and EZweb" on page 13, configure EZ News EX settings. If you did not configure the EZ News EX settings at the time of the initial setup, follow the steps below.

When the standby screen is displayed, select the ticker field and then press  (OK).




➔ **Follow the on-screen instructions.**

The setup procedure is completed.

- When the standby screen returns, a message asking you to wait for a while until the next update takes place appears in the ticker field.

Canceling EZ News EX

When the standby screen is displayed, select the ticker field and then press  (News).

➔ Press  (サブメニュー [Submenu]), use  to select サービス利用設定変更・解除 (Service Settings/Cancellation) and then press  (選択 [Select]).

➔ Use  to select サービス利用解除 (Service Cancellation) and then press  (選択 [Select]).

➔ **Follow the on-screen instructions.**

■ Changing the Reception Settings for EZ News EX Information

You can change the ring tone, vibrator and LED settings under M216 *NewsFlash Receive* for reception of EZ News EX information.

If you do not want the ring tone to sound when receiving EZ News EX information, set the volume to *OFF*.

EZ Navi

EZweb Subscription Required

Using GPS (Global Positioning System), EZ Navi provides useful positional information services.

When the standby screen is displayed, press  and then use  to select the EZnavi.

- The packet communication charges for using EZ Navi services apply to the amount of data sent and received. Some services may require a separate information fee.
- Before using EZ Navi, you must configure initial settings of EZweb (page 13).

Passenger Seat Navi for People in the Passenger Seat to Check the Route

Passenger Seat Navi guides the passengers to the destination with the best route using voice and map.

Drivers are not allowed to use Passenger Seat Navi.

Security Navi to Check Where Your Kids Are

The Security Navi application is made up of the following three functions:

いつでも位置確認 (Auto Position Search [monthly charge]),
エリア通知 (Area Message [no monthly charge]),
位置確認メール (Position Search Mail [no monthly charge])

Using these functions, you can check the position of an au cell phone that supports Security Navi; and automatically receive a notification from the specified au cell phones when your kids enter (or are in) or leave (or are no longer in) the set area within a predetermined period of time.

EZ Navi Walk for When You Go Out

Displays various useful menu items for when you are out. There are two menu modes: the Full Mode menu for those who want to use all the convenient functions including the latest features, and the Simple Mode menu with limited functions allowing you to use the service with simple operation.

The following table describes the Full Mode menu.

フリーワード (Free Word)	Search for information by entering keywords such as store names, addresses, and station names.
トータルナビ／地図 (Total Navigation/Map)	Find the most preferable combination of transportation (trains, airplanes, buses and taxis), and check out maps of your current location and places you like to go.
乗換／時刻表 (Connection/Timetable)	Search for train connections, timetables and other public transportation information.
お店／施設／イベント (Shop/Facility/Event)	Search for local stores, facilities or events.
ドライブ／渋滞情報 (Road/Traffic Information)	Check out road traffic information in real time.
オススメ便利メニュー (Useful Menu)	View information on services that are available on PCs, and use advanced functions of EZ Navi Walk that you can enjoy.

設定／会員登録／インフォ
(Setting/Membership
Registration/Information)

Configure various settings, sign up as a member or check out various useful information.

- Some of the menu options require a monthly charge.

■ The Map of Your Current Location



★ represents your initial location. As you start moving, changes of your location are tracked by continuous positioning and indicated in real time by 🧑.

The 現在地の地図 (Map of Your Current Location) option displays the current map in real time.

■ 3D Navi

Shows a 3D view at guidance points and around the destination area.

Evacuate Navi to Guide You Home or to Nearby Evacuation Areas during Disasters

Nearby public evacuation areas or the direction to your home can be determined using the map data pre-installed on the CA006 (避難所マップ [Evacuate Area Map]). Other useful contents can be downloaded from the 災害時ナビ (Evacuate Navi) section of the EZweb site.

- Some contents require a monthly charge.
- Use the information on the screen as a reference and always follow the instructions of police, fire and other municipal authorities.
- When using Evacuate Navi, checking your current position may take more time than usual depending on the status of the GPS satellites.


TV (1Seg)

EZweb Subscription Required

"1Seg", a mobile terrestrial digital television service in Japan, is available on the CA006.

Using the Built-in TV Antenna

When watching TV (1Seg), take care to avoid covering the built-in TV antenna with your hand in order to ensure proper reception.

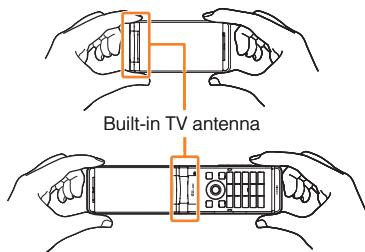

- Before using TV, you must configure initial settings of EZweb (page 13).
- If you are watching TV indoors, you may be able to improve the reception by moving closer to a window.

- The continuous viewing times of TV (1Seg) are as follows. The figures vary according to the usage of data broadcasts.

Continuous viewing time	Using earphones	DBEX ON: Approx. 3 hrs 40 min. DBEX OFF: Approx. 3 hrs 50 min.
	Using the speaker	DBEX ON: Approx. 3 hrs 40 min. DBEX OFF: Approx. 3 hrs 50 min.

- For information about the "1Seg" service, refer to the following homepage.
The Association for Promotion of Digital Broadcasting

From a PC	http://www.dpa.or.jp/
From a cell phone	http://www.dpa.or.jp/1seg/k/

Initial Setup of au Media Tuner

To watch TV (1Seg) using the au Media Tuner, you need to configure initial settings.



When the standby screen is displayed, hold down  for at least one second.

Disclaimer notes are displayed.

➔ Use  to check the disclaimer notes, use  to select **OK**, and then press  (**選択 [Select]**).

The initial setting screen for using the au Media Tuner is displayed.


- Follow the on-screen instructions to configure each setting. Then, the screen for setting TV (1Seg) channels appears.

➔ Use  to select **オート設定 (放送波) (Auto (Broadcasting wave))** and then press  (**選択 [Select]**).

Automatic channel scanning begins. When receivable channels are found, the channel setup is completed.

- Select **マニュアル設定 (Manual)** to set the channel manually.


Watching TV (1Seg)


When the standby screen is displayed, hold down  for at least one second.

To Change Channels

Use /  to change channels.


You can select TV (1Seg) and EZ Channel-Plus/EZ Channel programs.

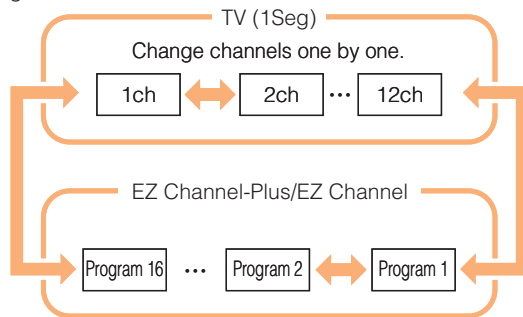


- Before using this feature, you must configure au Media Tuner initial settings (see the procedure on the left).
- Channels cannot be changed with  when the data operation screen is displayed.


Basic Operations

Launch TV (1Seg) to start receiving data broadcasts.

The data operation screen appears when a data broadcast is received. Press  (Vol/Ch) on the data operation screen to switch to the TV operation screen.

On the TV operation screen, pressing  switches the display.


Data operation screen

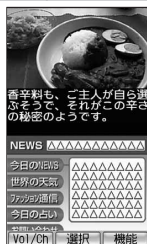


 (Vol/Ch)

TV operation screen



 (戻る [Return])

- On the TV operation screen, use  to adjust the volume.

Watching TV (1Seg) in Viewfinder Position

When the standby screen is displayed, hold down  for at least one second.

➔ Set CA006 to Viewfinder position.

See page 9 on how to set CA006 to Viewfinder position.

➔ Use  to adjust the volume.

➔ Use  to change the channel.

Exiting the au Media Tuner

Press , use  to select はい (YES) and then press .

Teens Mode

This "Teens Mode" limits the available functions. It is convenient for parents to control the use of cell phone by their children, for example.



Setting Teens Mode

When the standby screen is displayed, press .

➔ Use  to select *Function* and then press  (Select).

➔ Use  to select *Mode Setup* and then press  (Select).








➔ Select *Teens Mode* and then press  (Select).

➔ Use  to select *ON* and then press  (Set).

➔ Input the Lock No. and then press  (OK).

A confirmation screen is displayed. If you select "YES", the Outgoing/Incoming History and Mail Sent/Received History are deleted, and Teens Mode is activated.

Teens Mode menu

	Address Book Use Address Book
	C-mail Use C-mail
	Watch Use clock function
	Calculator Use calculator
	Memo Use memo related function
	Function Set various setup of mobile phone
	

In Teens Mode, only certain functions, such as Teens Mode Menu described below and Safety Buzzer and Security Navi, are enabled.

- Making and answering calls, and sending and receiving C-mail

Making and answering calls and sending and receiving C-mail only to the addresses listed in the Address Book are enabled. It is possible to make calls to some numbers, such as 110 (Police), 119 (Fire Department), 118 (Coast Guard Headquarters), even if they are not registered in the Address Book.

- Watch
- Calculator
- Address Book

Only addresses registered in the Address Book in advance can be used. Registering new addresses and editing registered addresses are disabled.

- Memo

Functions related to memo are enabled.

- Function

Some of the functions can be changed.














In Case of Loss of Your CA006




 









The Remote Ctrl Lock allows you to remotely activate the Auto Lock, FeliCa Lock, and Address Book Lock, preventing others from using your cell phone.

Setting Conditions for Activating the Remote Ctrl Lock

You can activate the Remote Ctrl Lock by calling your CA006 a set number of times from a registered phone number within a specified period of time.

When the standby screen is displayed, press .

- ➔ Use  to select *Function* and then press  (Select).
- ➔ Use  to select *Privacy/Rstr* and then press  (Select).
- ➔ Use  to select *Security Lock* and then press  (Select).
- ➔ Use  to select *Rem. Ctrl Lock* and then press  (Select).
- ➔ Enter Lock No., and then press  (OK).
- ➔ Use  to select *Valid No.* and then press  (Select).
- ➔ Use  to select *[Register New]* and then press  (Select).

- ➔ Use  to select *Direct Input*, press  (OK), enter a phone number, and then press  (OK).
- ➔ Press  (Comp).
- ➔ Use  to select *Duration (min)* and then press  (Select).
- ➔ Enter a time and then press  (Set).
 - This sets the time limit for receiving the set number of calls after the first call is received.
 - You can set a time from one to ten minutes.
- ➔ Use  to select *No. of Incm*, and then press  (Select).
- ➔ Enter a number of calls, and then press  (Set).
 - This sets the number of calls to receive to activate the Remote Ctrl Lock.
 - You can set a number of calls from three to ten.
- ➔ Press  (Save).
- ➔ Use  to select *YES* and then press  (OK).

Remotely Activating the Remote Ctrl Lock on Your CA006

Call the CA006 from the registered phone number repeatedly within the set time limit.

- When the specified number of calls are received, the Remote Ctrl Lock is activated and a message plays telling you that the cell phone is locked.

Activating the Remote Ctrl Lock by the Security Lock Service

Even if the Remote Ctrl Lock is not set in advance, the Remote Ctrl Lock can be activated by calling au Customer Service Center or completing the application process on au Customer Support from a PC.


The Security Lock Service is available free of charge.

- You must fill out an application to use au Customer Support (the application can be filled out even after your cell phone is lost).

Calling au Customer Service Center for Activating/Canceling the Remote Ctrl Lock

From an au cell phone: 113 without a prefix (toll free)

From any other cell phone or fixed-line phone:

 0077-7-113 (toll free)

Open 24 hours



 




 
 
Follow the voice guidance to complete the application process.

 



 

Activating/Canceling the Remote Ctrl Lock from a PC


Login to au Customer Support (<https://cs.kddi.com/>) and complete the application process by following the on-screen instructions.

- The Remote Ctrl Lock cannot be activated when the CA006 is turned off or out of the service area, or Emission OFF is set to *ON*.

Troubleshooting

Symptom	Possible Cause	Remedy	Page
Cannot turn on power.	● Is the battery pack charged?	Charge the battery pack.	11
	● Did you hold down  for at least a few seconds?	Hold down  for at least a few seconds.	13
Cannot make calls.	● Is power turned on?	Hold down  for at least a few seconds.	13
	● Is  (out of range indicator) displayed?	Move to a location where  (out of range indicator) is no longer displayed, and try again. Also check the <i>Area Setting</i> .	13, 25
	● Is your hand or a metal object covering the area around the built-in antenna?	Make sure your hand or any other metal object is not covering the area around the built-in antenna.	8
	● Did you enter the phone number starting with the area code?	When making a call to a phone other than a cell phone, you need to enter the area code even if you are inside the same area.	20
Cannot receive calls.	● Is  (out of range indicator) displayed?	Move to a location where  (out of range indicator) is no longer displayed. Also check the <i>Area Setting</i> .	13, 25
	● Is power turned on?	Hold down  for at least a few seconds.	13
No response when a key is pressed.	● Is power turned on?	Hold down  for at least a few seconds.	13
	● Is your palm or other part of your body pressing the shutter key when you operate the phone?	Change how you hold the phone so the shutter key is not pressed.	—
A warning tone sounds and power turns off.	● Is there enough power left in the battery pack?	Charge the battery pack.	11

Symptom	Possible Cause	Remedy	Page
Calls are answered automatically.	● Is Answer memo turned on?	Hold down  for at least one second to turn off Answer memo.	23
Cannot hear the other party.	● Is the earpiece volume too low?	Press  during a call to increase the earpiece volume.	22
When making a call, a beeping sound is heard from the earpiece and a connection cannot be established.	● Is  (out of range indicator) displayed? Or are you in a location where the signal is too weak?	Move to a location where  (out of range indicator) is no longer displayed. Also check the <i>Area Setting</i> .	13, 25
	● Is the wireless line busy or is the phone you are calling on another line?	End the call and try again later.	20
The incoming indicator (LED) flashes but the ring tone does not play.	● Is manner mode turned on?	Hold down  for at least one second to turn off manner mode.	22
	● Is  (ring tone off indicator) displayed?	Increase the volume of the incoming call ring tone.	23
Cannot charge the battery pack.	● Is the battery pack attached properly?	Attach the battery pack properly.	10
	● Are the plug and connector of the AC adapter inserted properly?	Insert the plug and connector firmly.	11
When the camera is activated, no subject is displayed.	● Is a finger or other object covering the camera lens?	Check the position of the camera lens and remove the obstacle.	36

- For more detailed information, visit the following au troubleshooting sites:
 - From an au cell phone:  ⇒ *Top Menu/Search* ⇒ *auお客さまサポート* (au Customer Support) ⇒ *オンラインマニュアル* (Online Manual) ⇒ *故障診断Q&A* (Troubleshooting FAQ)
 - From a PC: <http://www.kddi.com/customer/service/au/trouble/kosho/index.html>

Index

Numeric

1Seg	49
------------	----

A

Accessories	7
Address book	30
Dialing	30
Editing	30
Saving	30
Saving a phone number from the incoming or outgoing history	31
Answer memo	23
Playback	23
Turning off	23
Turning on	23

B

Battery level	14
Battery pack	7,10
Battery pack/cover	8

C

Camera	36
Photo taking tips	36
Recording a movie	39
Recording an HD movie	38
Taking a photo	37

Cell phone etiquette	2
Character input	27
Character entry modes	27
Deleting characters	28
Entering characters from the same key	28
Starting a new line	28
Charging the battery pack	11
Checking charges	43
C-mail	35
C-mail safety block	35
Creating and sending	35
Reading received mail	35
Contents	5

D

Disaster Message Board Service	3
Display	8,14
Domain	17
Downloading Chaku-Uta®	43
Downloading Chaku-Uta-Full®	43
Downloading Chaku-Uta-Full-Plus®	43
Dust resistance	4

E

Earpiece volume	22
E-mail	32
Creating and sending	32
Initial settings	13
Reading received mail	33
Replying	33

Viewing attached images	33
E-mail address	13
Available characters	27
Changing	17
Entering	28
Entering pictograms/Decoration-Emojis/symbols/ face marks	29
Evacuate Navi	48
EXILIM menu	37
EZ Navi	46
EZ Navi Walk	47
EZ News EX	44
Canceling	44
Changing the Reception Settings	45
Info pane	14
Setting	44
Ticker field	14
EZ password	18
EZweb	40
Accessing sites	41
au one Top	41
Basic operations	42
Initial settings	13
G	
Global Function	25
Calling Japan from Overseas	26
Obtaining the Latest PRL (Preferred Roaming List) ..	25
Setting the Area	25

H

HD Movies	38
Recording	38
Recording mode	38
Viewing	39

I

Incoming history	21
Indicators	14
Initial settings	13,50
au Media Tuner	50
E-mail · EZweb	13
TV (1Seg)	50
International Call	20
Internet	40
Sites	41,42

K

Key assignments	12
-----------------------	----

L

Language	13
Learning the basics	12
Lock No.	18

M

Mail	32
C-mail	35

E-mail	32
Mail filters	34
Simple settings	34
Main menu	15
Manner mode	22
Movies	39
Recording	39
Recording mode	39
Viewing	39

N

Names of parts	8
Notification window	13

O

One-ring calls	21
Outgoing history	21

P

Passenger Seat Navi	46
Passwords	18
Phone (call)	20
184/186	20
Answering	21
International Call	20
Making	20
Returning	21
Phone number	13
Photos	36
Photo modes	36

Taking	37
Viewing	39
Playback	
Answer memo	23
Position of CA006	9
Premium EZ password	18

R

Remote Ctrl Lock	53
Replacing the battery pack	10
Ring tones	
Changing the type	22
Changing the volume	23

S

Security code	18
Security Lock Service	54
Security Navi	46
Signal strength	14
Simple menu	16
Sites	41
Bookmarking	42
Viewing from bookmarks	42
Spam	34

T

Teens Mode	52
Troubleshooting	55
Turning on/off power	13
TV (1Seg)	49

Antenna	49
Basic operations	51
Changing channels	50
Exiting	51
Initial settings	50

V

Viewing

Photos/HD Movies/Movies	39
-------------------------------	----

W

Water resistance	4
------------------------	---

For inquiries, call: au Customer Service Center

For general information and charges (toll free)

From fixed-line phones:

 0077-7-111

From au cell phones:

157 area code not required

PRESSING ZERO WILL CONNECT YOU TO AN OPERATOR
AFTER CALLING 157 ON YOUR au CELL PHONE.

For loss, theft or damage and operation information
(toll free)

From fixed-line phones:


 0077-7-113

From au cell phones:

113 area code not required

In case above numbers are not available,

 0120-977-033 (except Okinawa)

 0120-977-699 (Okinawa)

From EZweb:

Access Method

EZ▶ Top Menu/Search▶ auお客さまサポート (au Customer Support)▶ お問い合わせ (Inquiries)
• Menu are subject to change without prior notice.

なるほど! au
みんなでつくる、auQ&Aサイト

Access Method

EZ▶ Top Menu/Search▶ auお客さまサポート (au Customer Support)▶ みんなでQ&A「なるほど! au」(au User's Forum)

Read this code for an easy
access to なるほど! au
(au User's Forum). ▶

• The packet communication
charge applies.



Downloading LISMO Port

LISMO Port and USB driver, which are software
required for using LISMO on a PC, can be
downloaded from the au home page.

From PC: <http://www.au.kddi.com/music/dl3>



モバイル・リサイクル・ネットワーク
MOBILE RECYCLING NETWORK

Cell phone and PHS operators collect and recycle unused
telephones, batteries and battery chargers at stores
bearing the ♻️ logo regardless of brand and manufacturer
to protect the environment and reuse valuable resources.

Read this code for an easy
access to au Online Manual.



EZweb version of the au Online
Manual can be used with no
communication charge.
(Packet communication charges do not apply.)

BMN6640YAA-1
October 2010, 1st Edition

Sales: KDDI CORPORATION・
OKINAWA CELLULAR TELEPHONE COMPANY
Manufactured by: CASIO COMPUTER CO., LTD.